

PARTS BAG CONTENTS

Make sure you have all items listed under **PARTS LIST** and **PARTS BAG CONTENTS** before you begin the installation process.

Your Parts Bag will include:

Qty.

22 M6 X 12 mm Bolts (Black)

20 M6 Star Washers

2 M6 X 12 mm Bolts (Silver)

2 M4 X 10 mm Bolts

Qty.

8 #10 Self-Tapping Screws


2 M6 Washers

1 M4 Washer

1 M4 Nut

2 Wheel Washers


M6 X 12 mm Bolts (Black)

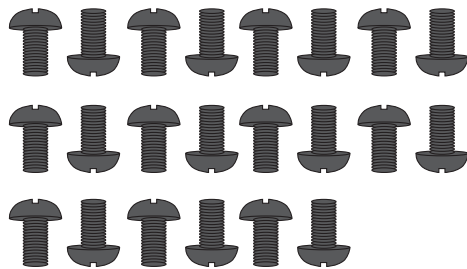


M4 X 10 mm Bolts



 
M6 X 12 mm Bolts (Silver)




Wheel Washers

 

M6 Star Washers

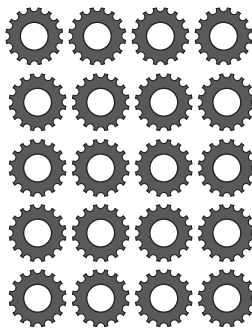

#10 Self-Tapping Screws

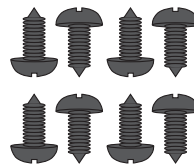

M6 Washers



M4 Nut



M4 Washer



ASSEMBLY INSTRUCTIONS

**⚠ READ ALL SAFETY WARNINGS & ASSEMBLY INSTRUCTIONS CAREFULLY
BEFORE ASSEMBLING OR OPERATING YOUR GRILL.**


WE RECOMMEND TWO PEOPLE WORK TOGETHER WHEN ASSEMBLING THIS UNIT.

The following tools are required to assemble this Brinkmann® 3330 Outdoor Gas Grill:

- **Phillips Head Screwdriver**

PARTS LIST:

- | | |
|-------------------------------|-----------------------------|
| ① 1 Grill Body Assembly | ①⑥ 1 Front Right Cart Leg |
| ② 1 Left Side Table Assembly | ①⑦ 2 Left Cart Braces |
| ③ 1 Right Side Table Assembly | ①⑧ 1 Right Cart Brace |
| ④ 1 Side Burner Grate | ①⑨ 1 Rear Cart Brace |
| ⑤ 1 Bottle Opener | ②⑦ 1 Tank Support Bracket |
| ⑥ 1 Hood Handle | ②⑧ 1 Tank Retention Bracket |
| ⑦ 1 Grease Tray | ②⑨ 1 Carriage Bolt |
| ⑧ 1 Warming Rack | ③⑦ 1 Wing Nut |
| ⑨ 2 Cooking Grills | ③⑧ 1 Tank Brace |
| ⑩ 3 Heat Distribution Plates | ③⑨ 2 Wheel Axle Bolts |
| ⑪ 1 Upper Cart Front Panel | ④⑦ 2 Cotter Pins |
| ⑫ 1 Lower Cart Front Panel | ④⑧ 2 Wheels |
| ⑬ 1 Rear Left Cart Leg | ④⑨ 1 Side Burner |
| ⑭ 1 Front Left Cart Leg | ④⑩ 1 Grease Cup |
| ⑮ 1 Rear Right Cart Leg | |

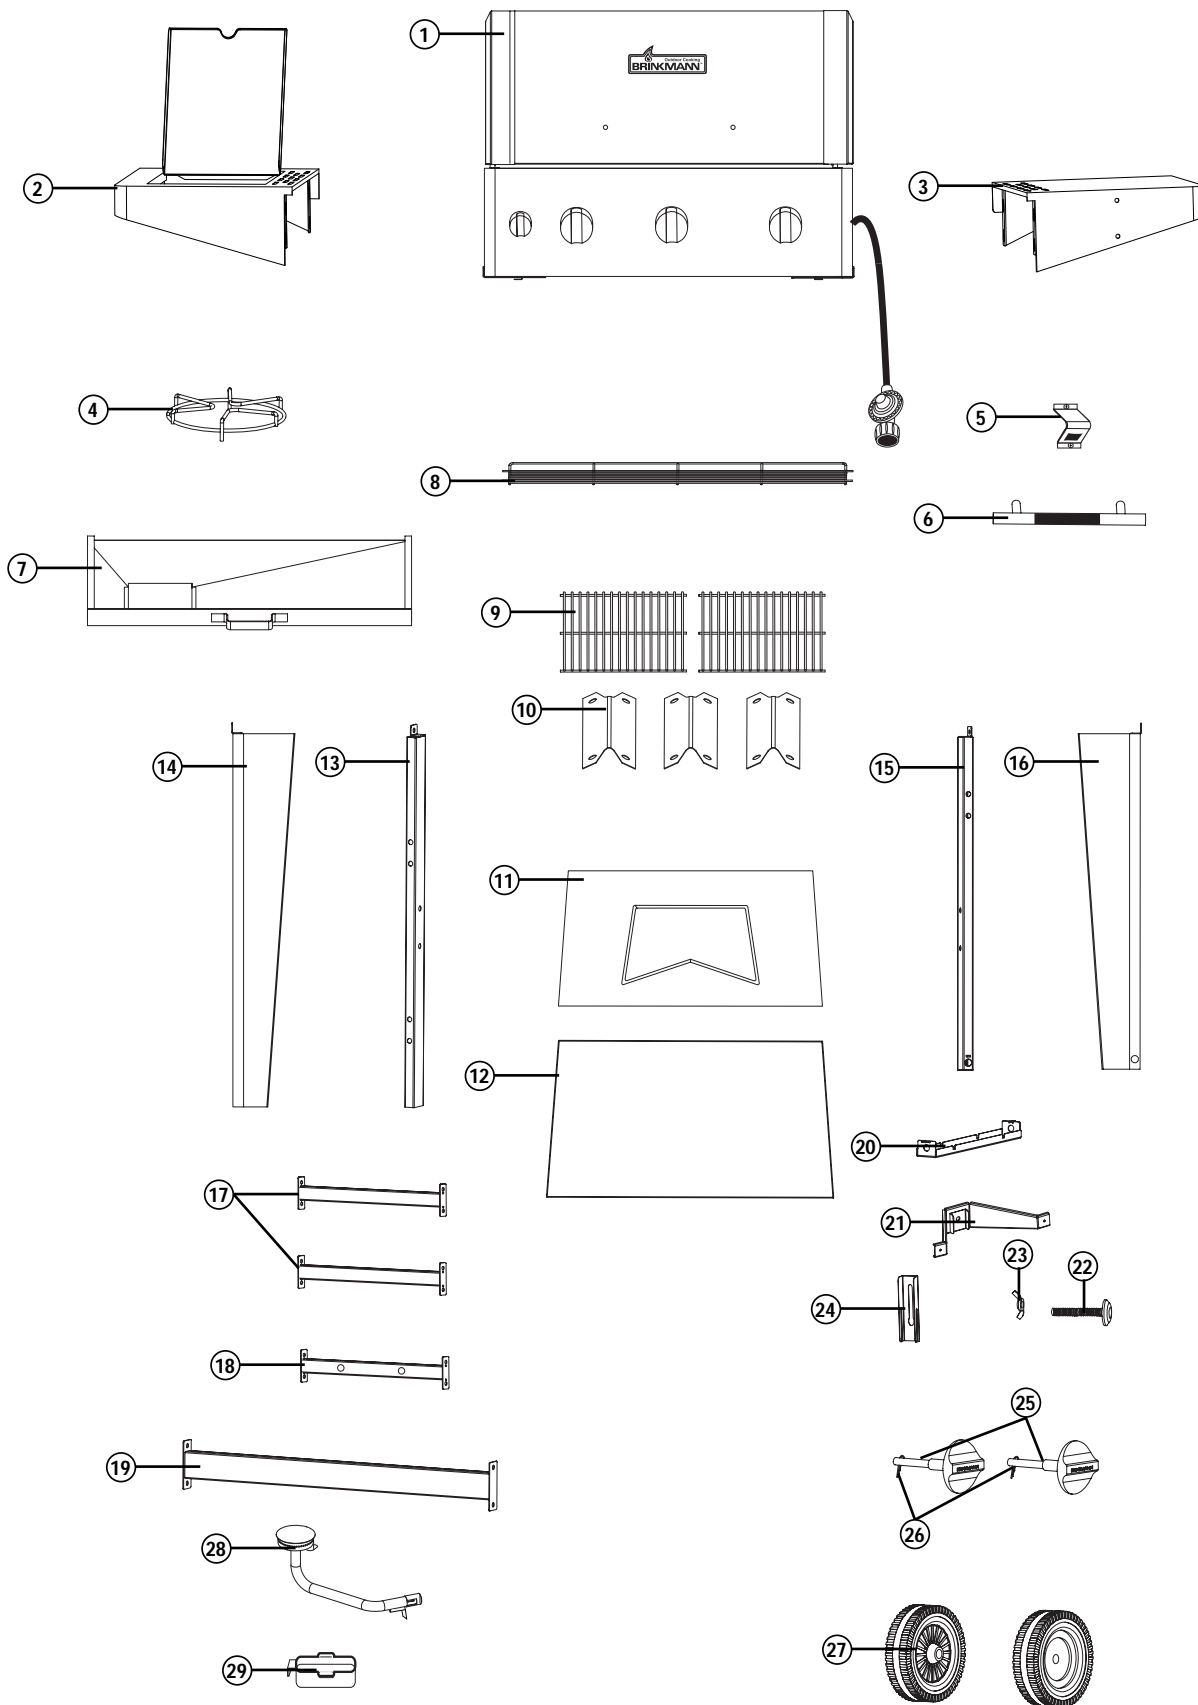

FOR COVERS, ACCESSORIES AND OTHER PRODUCTS, PLEASE VISIT US ONLINE AT:

WWW-BRINKMANN-NET

21 Inspect contents of the box to ensure all parts are included and undamaged.